

## AL-73208

### Automatic E-Tank Lock Mounting Instructions

Remove hand screw which secures E-Tank into the holder.  
Mount the unit in place of the hand screw, allowing the black lever to extend into the center of the ring.

**ATTENTION:**

ETAL 4.5 is only to be used with holders with a ring diameter of up to 4 ½"  
ETAL 5 is only to be used on holders with a ring diameter of 5"

**MAKE SURE PROPER UNIT IS USED FOR CORRECT DIAMETER HOLDER OR THE AUTOMATIC E-TANK LOCK WILL NOT FUNCTION PROPERLY.**

### Automatic E-Tank Lock Operation Instructions

**Securing E-Tank:** Placing E-Tank in holder automatically secures it.

**Removing E-Tank:**

Place thumb on top of unit and pull back the black lever to release E-Tank. You must keep lever pulled back until E-Tank is completely out of the holder. (Placing thumb on the top of the unit is to help keep the holder from moving for ease of use.)

## AL-73208