



AL-81839 Lounge Chair

Parts Listing


A
Back Cushion
1 Unit

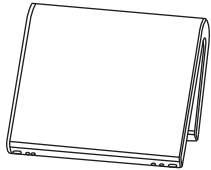

B
Seat Cushion
1 Unit

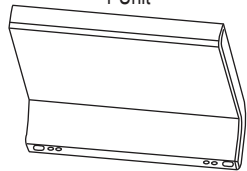

C
Frame / Legs
2 Units

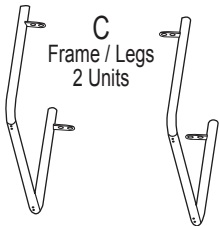


D
Screws
8 Units



F
Ganging Bracket Screw
2 Units





E
Ganging Brackets
2 Sets



G
Ganging Bracket Nut
2 Units



5mm Allen Wrench
1 Unit

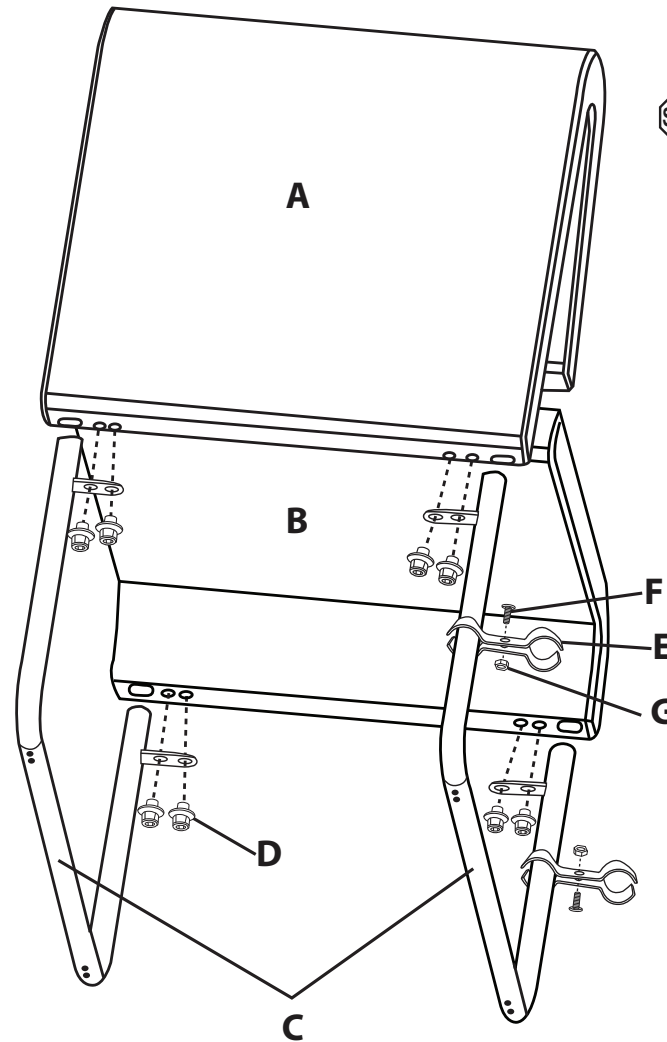

WEIGHT CAPACITY: 250 lbs.

Assembly Notes:

During assembly, hand tighten screws only. When all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.



Assembly Instructions

Tools Needed: Allen Wrench and a Standard Screw Driver.

Step 1: Insert the Frame/Legs (C) into the large holes in the Back Cushion (A) and the large holes in the Seat Cushion (B) as shown.

Step 2: Align the holes in the Frame/Legs (C) with the corresponding holes in the Back Cushion (A) and Seat Cushion (B).

Step 3: Insert Screws (D) through the holes in the Frame/Legs (C). Tighten by hand.

Step 4: When all screws are in place, tighten with Allen Wrench.

Step 5: If applicable, attach Ganging Bracket (E) to Frame/Legs (C) using Ganging Bracket Screw (F) and Ganging Bracket Nut (G). Tighten using Screw Driver.

Phone: 800-323-4282
Fax: 800-950-1167

ALCO
Sales & Service Co.

info@alcosales.com
www.alcosales.com



Like us on Facebook at:
facebook.com/ALCOSalesServiceCo



Follow us on Twitter at:
twitter.com/ALCOSales