

## **AL-26424 Wet Area Safety Fall Mats**


### **Modular Shower & Bath Tiles**

Carefully read all instructions and warnings in their entirety prior to use. This product is not suitable for all bath and shower areas. Product removed from its original packaging is non-returnable for reasons other than manufacturing defects. The buyer must ensure that the product is properly fit and installed before use.

**WARNING: USE OF AL-26424 WILL NOT PREVENT A FALL AND IS NOT A GUARANTEE AGAINST INJURY OR A GUARANTEE AGAINST SEVERE INJURY.**

#### **Installation Instructions**

**WARNING: THIS PRODUCT IS DESIGNED SPECIFICALLY FOR USE IN HARD SURFACE SHOWER AND BATH AREAS SUCH AS, CONCRETE OR TILE, WHERE THE WALLS AND FLOORS ARE PERPENDICULAR TO EACH OTHER (See Fig: A1) THE MAT MUST BE INSTALLED WITHIN 1/8" TO THE WALLS (Minimum 2 Walls) TO PREVENT SLIPPAGE. (See Fig. A2)**

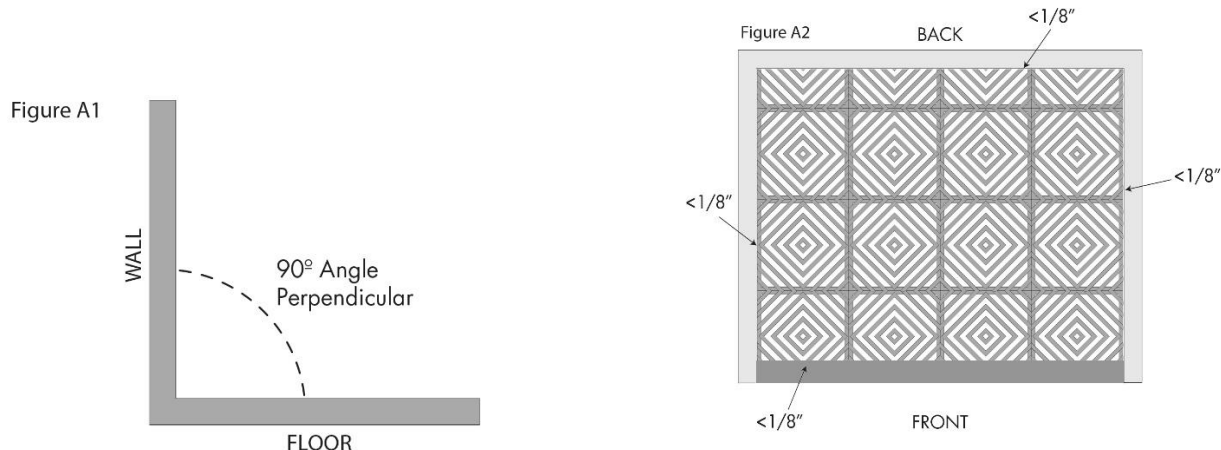

Plan your layout before beginning installation.

Take careful measurements of the installation area. The surface size of each tile is 11.75" x 11.75".

If installing the beveled edge to allow easy access for shower chairs etc., this will be the starting point (shower entry) working towards the back wall. For larger areas, removable sections no larger than 4 squares by 4 squares (3x3 being preferable) can be created. This will allow for easier cleaning and disinfection.

To create removeable sections, simply remove the loop connectors from the edges of the 3x3 section and the adjoining sections after the layout and fit are correct are correct for the space.

#### **Cutting Instructions:**

Step 1: Measure area where mat will be going


Step 2: Mark mat where you would like to cut

Step 3: Using a straight edge and a sharp utility knife, cut for proper fit

**WARNING Cut Hazard: Sharp blade. Contact may result in injury. Always keep blades away from fingers and body. Handle with care.**


Step 1: Layout the first row of tiles using the beveled edge pieces. Position the tiles so that the loop connectors are facing to the left (See figure B). Carefully press the post connectors into the loop connectors (This works best on a hard surface). When complete with first row, lay the second row of tiles connecting them to the first row. Continue process until complete. (See Figure D). Cutting may be necessary to fit shower properly.

Figure B

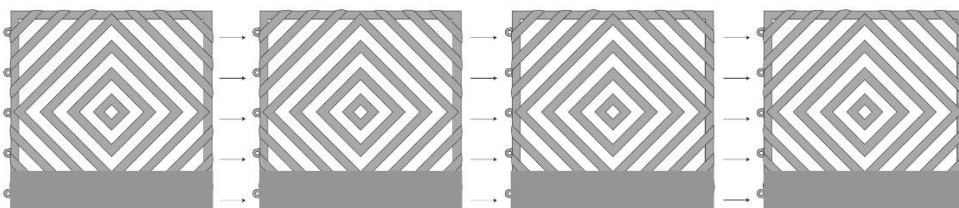

Step 2: Continue installation moving toward back wall. (See Figure D)

Figure D

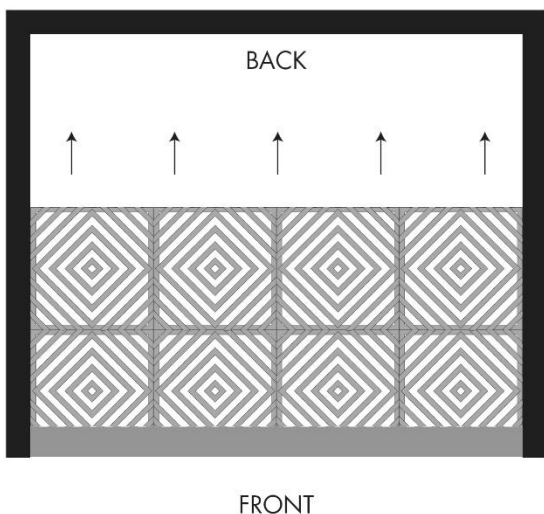

Note: Individual tiles may be glued together to form a more permanent mat. Use a permanent glue designed for plastics such as Gorilla® brand Super Glue Gel. After tiles are glued together, attempting to separate pieces will lead to their destruction.

#### **Cleaning & Disinfecting Instructions:**

Step 1: Remove heavy soils or foreign matter by rinsing with clean water. Stubborn soils may require scrubbing with a soft bristle brush.

Step 2: Rinse with clean water.

Step 3: Spray both sides with your choice of PVC safe disinfectant following the manufacturers guidelines.

Step 4: Rinse with clean water.

Step 5: Air dry

#### **Warranty: 1-Year Limited**

Modular Wet Area Safety Fall Mat is warranted to be free of defects in materials and workmanship for a period of one year from the date of purchase. Cuts, Tears, marks, discolorations and indentations are not covered by the warranty. Standard wear and loosening of any pieces and or connections is not covered by the warranty and does not affect the impact absorbing qualities of the mat.

