



## ASSEMBLY INSTRUCTIONS

AL-55158 – MOBILE SCALE



**TOOLS REQUIRED: Two - 7/16" wrenches or sockets, one 1/2" wrench or socket.**



- 1) Place Mounting Bar on base.


- 2) Attach Handle Bars to the base by inserting the 5/16" – 18 x 2 1/4" bolts through the top hole of the Handle Bar – through the base hole and into the Mounting Bar. Do not tighten completely until the bottom bolt has been inserted.



- 3) Insert the 1/4" – 20 x 1 3/4" bolt through the bottom hole of the Handle Bar and through the base. Secure it with the 1/4" – 20 nylon lock nuts. Tighten all bolts and nuts on the Handle bars before proceeding.

- 4) Place the Scale onto the Mounting Bar and use the hardware included with the scale to secure it to the Mounting Bar.

Note: It may be necessary to loosen the nuts on the scale to allow the bolts on the scale to align with the holes of the Mounting Bar. Make sure you re-tighten the nuts if this is done.

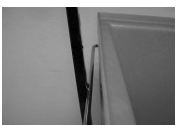

- 5) Place the Poly Tub between the arms of the handles and onto the scale.

Note: Make sure that the Handle Bars do not rest against the Poly Tub. If they do, gentle pull back on the handle away from the Poly Tub until a small gap is created. This will assure that the scale will weigh properly. If the scale needs to be zeroed out, there is a small dial on the right side of the scale that needs to be adjusted until the scale reads zero pounds.

### **WARNING**

- Never allow anybody to ride in or on cart.
- Always proceed slowly. Be sure wheels roll free and turn easily.
- Place all loads in center of basket for balance.
- Maximum capacity per basket: 100 pounds.

6851 High Grove Blvd., Burr Ridge, IL 60527  
800-323-4282 Toll Free • Fax 800-950-1167  
E-mail: [info@alcosales.com](mailto:info@alcosales.com) [www.alcosales.com](http://www.alcosales.com)